




Wall Coatings

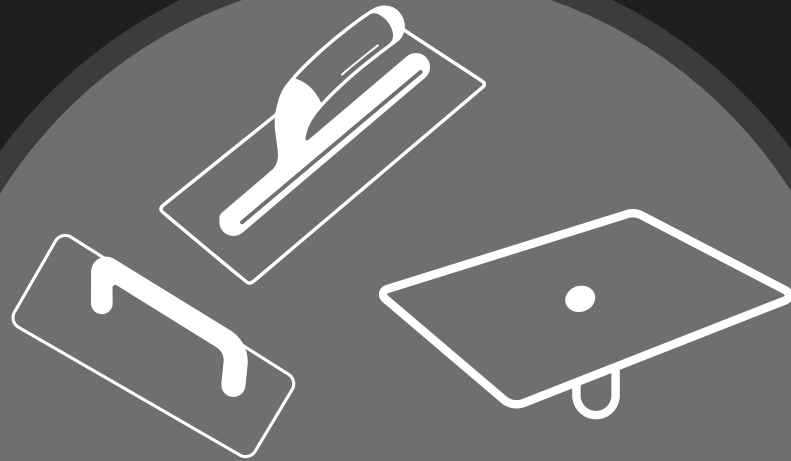

1. Stainless Steel Plastering Trowel
2. Plastering Hawk (Handock)
3. 3mm Plastic Float


Using a Stainless Steel Trowel ensures that no rust is transferred during the application process

TOOLS




- Remove loose and flaking paint
- Clean down surface from all dirt and debris

CLEANING

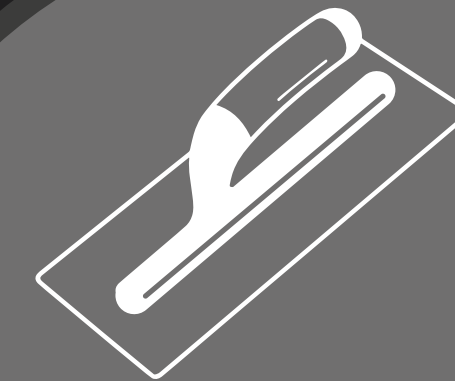

Apply a single coat of A&Z Level Coat to prime surface and fill cracks
Allow to dry for 24 hours


LEVEL COAT

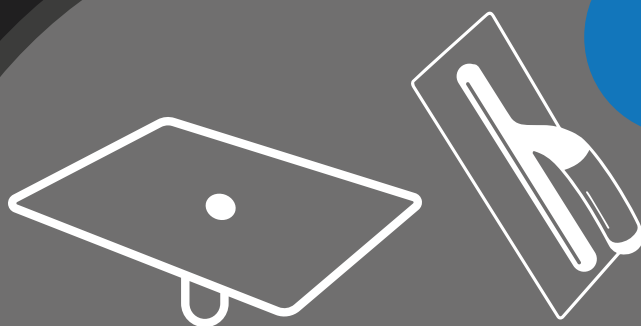

Scoop a palm size amount of A&Z Gamazine onto the edge of your plastering hawk.

Scoop up about half of it onto your plastering trowel


LOADING

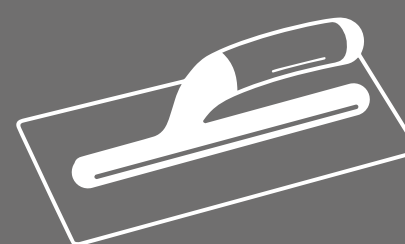

Once your trowel is loaded, Apply product to the surface swiping from bottom to top.
Aim to keep the application approximately 3-4mm thick for the best coverage.

Swiping from side to side would assist in removing any creases that may form whilst applying in the bottom to top motion

APPLICATION

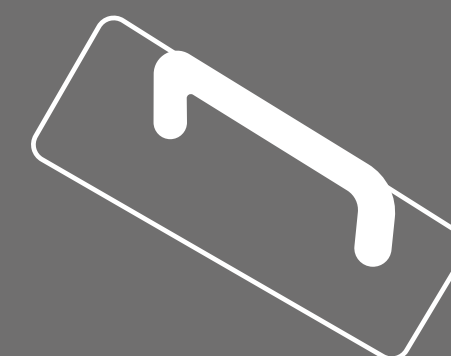

A short while after application, run your plastic float in either a vertical or circular motion to achieve the desired result.

Allow 7 days drying time

FINISHING