




Wall Coatings

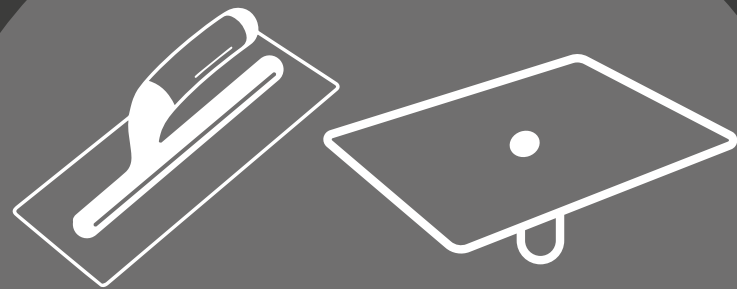

- 1. Stainless Steel Plastering Trowel
- 2. Plastering Hawk (Handock)

Using a Stainless Steel Trowel ensures that no rust is transferred during the application process


TOOLS



1

- Remove loose and flaking paint
- Clean down surface from all dirt and debris


CLEANING

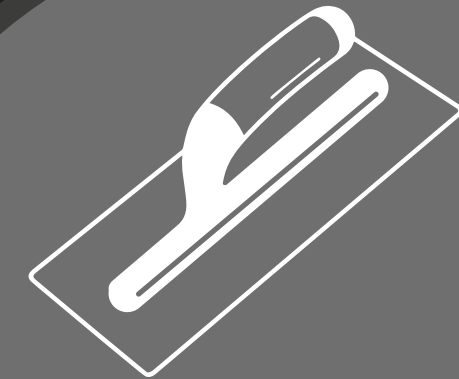

2

Apply a single coat of A&Z Level Coat to prime surface and fill cracks
Allow to dry for 24 hours

LEVEL COAT

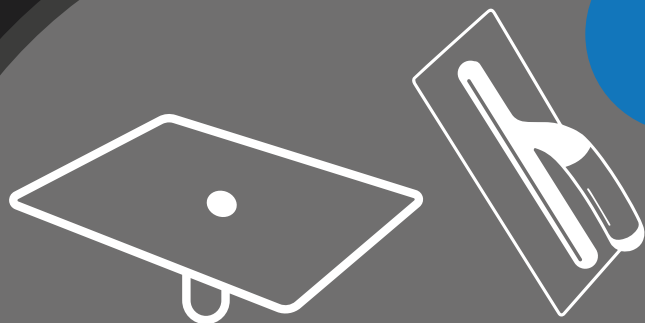


3

Scoop a palm size amount of A&Z Glamour Coat onto the edge of your plastering hawk.

Scoop up about half of it onto your plastering trowel

LOADING

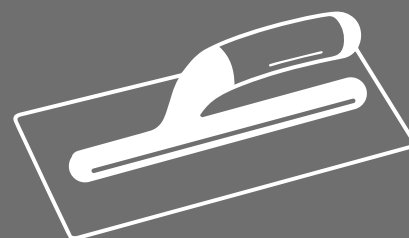


4

Once your trowel is loaded, Apply product to the surface swiping from bottom to top.
Aim to keep the application approximately 3-4mm thick for the best coverage.

Swiping from side to side would assist in removing any creases that may form whilst applying in the bottom to top motion

APPLICATION

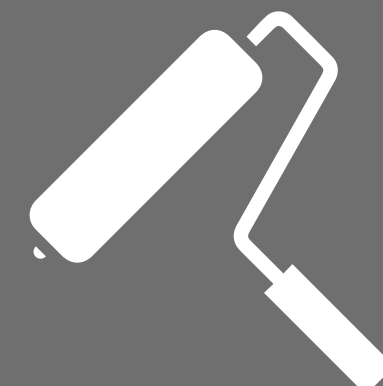

5

Apply a coat of the Decorative Plaster Sealant for a glossy finish and added protection.

Allow 24 hour drying time

SEALING

